




1

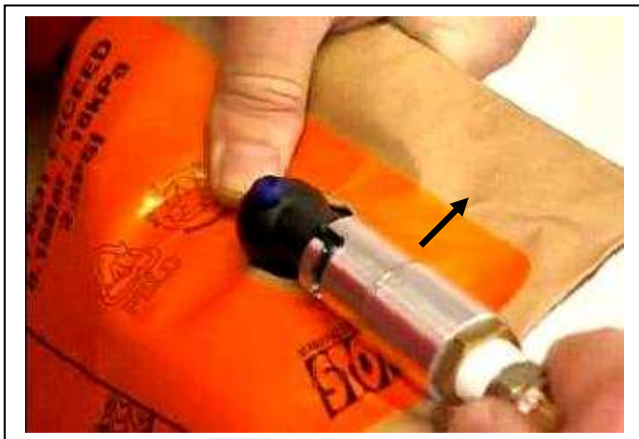

Insert the bnn nozzle of the airgun into the valve.



Turn the nozzle to the right...



.. to lock the airgun on the valve.



Make sure there are no sharp objects in the container which can damage the Dunnage Bag and position the Dunnage Bag between the cargo.



Make sure the Dunnage Bag does not contact the floor.



7

Fill the Dunnage Bag with air and upon reaching the required air pressure.....



8

.. remove the airgun by turning the nozzle and pulling it of the valve.



9